


A single-user, stand alone licence of FluidFlow3 can be transferred from one computer (the 'current' computer) to another (the 'receiving' computer).

1. Install FluidFlow3 onto the 'receiving' computer. It will install as an evaluation licence. Check that installation has been successful, **note the Product ID** and close FluidFlow3.
2. Open FluidFlow3 on the 'current' computer and open the menu option *Help | Activate FluidFlow* and then open the tab *Transfer Licence* as shown on the image below.

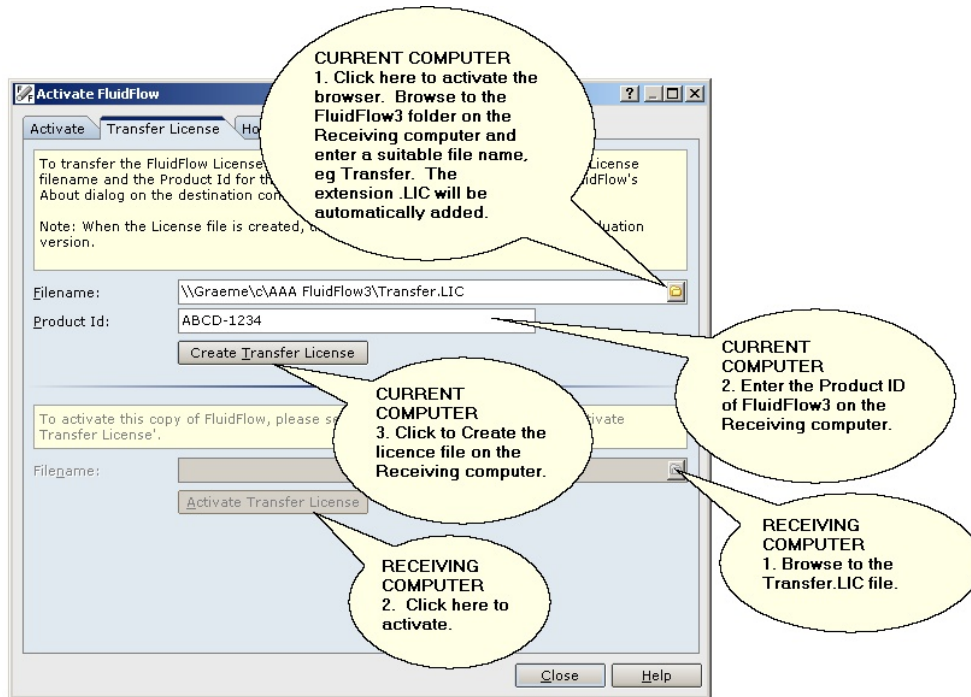

3. On the upper panel, use the button on the right hand side of the *Filename:* field to open the browser.
4. Browse to the FluidFlow3 folder on the 'receiving' computer and type in a suitable file name, say **Transfer** (the extension .LIC will be automatically added – ie the file name will be *Transfer.LIC*).
5. Type in the Product ID of the 'receiving' computer as noted from Step 1.
6. Click on the *Create Transfer Licence* button.
7. This places the software licence into the file *Transfer.LIC* on the 'receiving' computer. Note the licence of FluidFlow3 on the 'current' computer has now reverted to an evaluation version.
8. Open FluidFlow3 on the 'receiving' computer and open the menu option *Help | Activate FluidFlow* and then open the tab *Transfer Licence*.
9. From the lower panel browse to the licence file, ie *Transfer.LIC* and then click on the *Activate Transfer Licence* button. Then restart FluidFlow3 to complete.

The above instructions assume that both computers are on the network. If not, you can save the transfer file to flash drive instead of directly to the receiving computer (Step 4 above) and then read from the flash drive in Step 9 above.

NOTE: IN ORDER TO TRANSFER THE LICENCE BACK TO THE ORIGINAL COMPUTER (OR TO TRANSFER TO A THIRD COMPUTER), YOU HAVE TO REPLICATE THE ABOVE STEPS, IE THE RECEIVING COMPUTER NOW BECOMES THE CURRENT COMPUTER.

Important: You must follow the above steps precisely or you may lose the licence

Accutech 2000 Pty Ltd PO Box 65, Applecross Western Australia 6953	T: 08 9364 2211 F: 08 9316 1364 E: info@accutech2000.com.au	ABN: 40 062 194 580
--	---	---------------------